



变径转接 ADAPTER



名称	型号	规格(英寸)	使用频率 (MHz)
Name	Model	Specification(inch)	Frequency (MHz)
变径 转接 ADAP -TER	RL036-01	L36-J 转 L27-K L36-J-L27-K	DC-880
	RL078-03	7/8"(法兰) 转 1-5/8"(法兰) 7/8"(Flange)-1-5/8"(Flange)	
	RL078-04	7/8"(法兰) 转 1-5/8"(直馈) 7/8"(Flange)-1-5/8"(Rigid line)	
	RL158-08	1-5/8"(直馈) 转 L27-K 1-5/8"(Rigid line)-L27-K	
	RL158-09	1-5/8"(直馈) 转 L29-K 1-5/8"(Rigid line)-L29-K	
	RL158-13	1-5/8"(直馈) 转 L52-K 1-5/8"(Rigid line)-L52-K	
	RL158-14	1-5/8"(直馈) 转 L52-J 1-5/8"(Rigid line)-L52-J	
	RL318-09	3-1/8"(直馈) 转 1-5/8"(直馈) 3-1/8"(Rigid line)-1-5/8"(Rigid line)	
	RL412-08	4-1/2"(直馈) 转 3-1/8"(直馈) 4-1/2"(Rigid line)-3-1/8"(Rigid line)	
	RL618-08	6-1/8"(直馈) 转 4-1/2"(直馈) 6-1/8"(Rigid line)-4-1/2"(Rigid line)	
	RL618-09	6-1/8"(直馈) 转 3-1/8"(直馈) 6-1/8"(Rigid line)-3-1/8"(Rigid line)	

